



Open Window

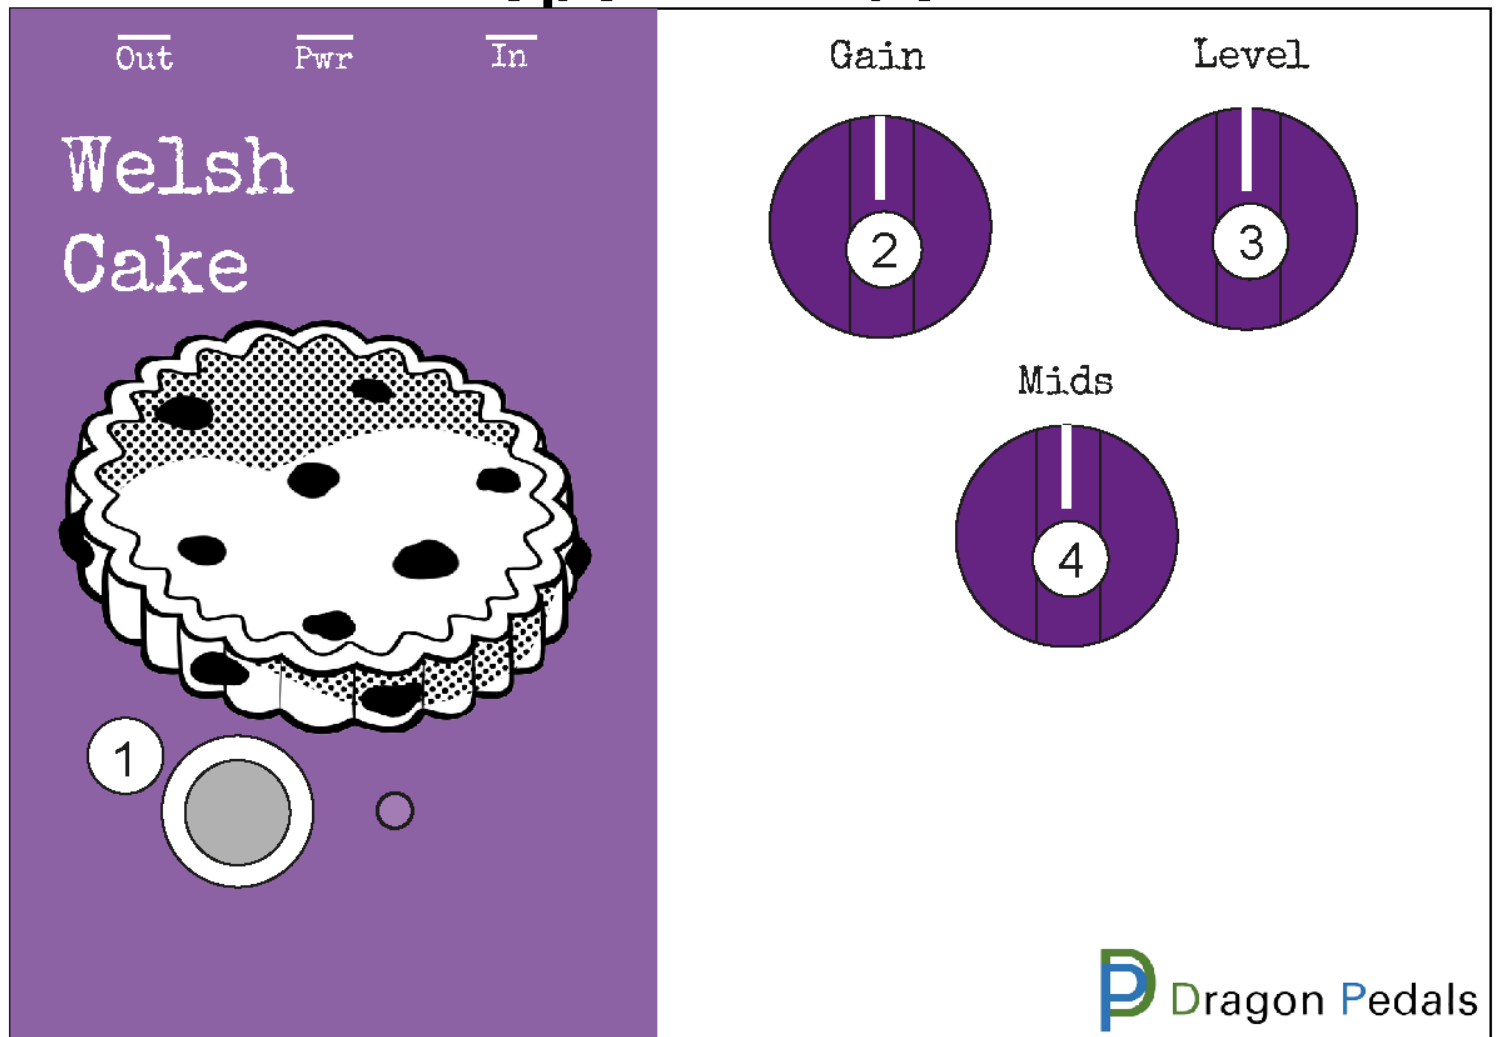

1. Footswitch operates the Open Window. On when the LED is lit.
2. Adjusts the level of the Gain.
3. Adjusts the level (volume) of the pedal.
4. Adjusts the amount of mids in the output.

For the Mids control: Anti-clockwise is more mids, clockwise is fewer mids. Mids straight up might not be the best setting. Try all the way left and adjust a little towards the right to suit, or try all the way to the right and adjust a little to the left to suit.

The Welsh Cake Connectors

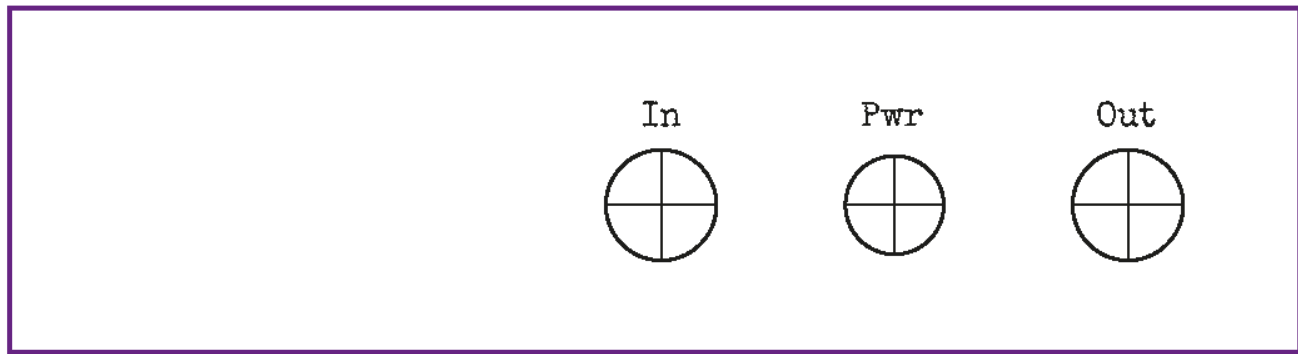

PWR: Standard effects pedal power; +9V centre negative.

In: Connect your instrument or the previous pedal's output to this socket.

Out: Connect this socket to your amplifier or the next pedal's input.